


ACRYLIC SLIMLINE INSTALLATION INSTRUCTIONS

VEHICLE DESCRIPTION:
PART NUMBER:
FITMENT TIME:


30 MINUTES




WARNING: Do not install Slimline below 10°C (50°F). Ideal installation temperature is between 20°-40°C (70°-105°F). Slimline will adhere successfully below 10°C after initial curing. Full tape strength is achieved after 72 hours.

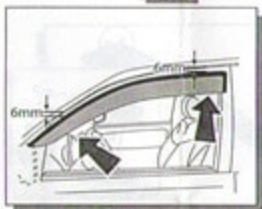

1. Clean and dry upper door frame. Trial fit Slimline Weathershield onto door frame by aligning the top edge of Slimline Weathershield firm from the top edge of the door frame, as shown. Note tape attachment areas. **DO NOT REMOVE TAPE LINER.**

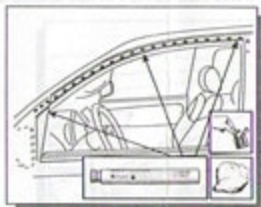

2. Clean previously noted tape attachment areas **THOROUGHLY** with the alcohol wipe provided. Wipe away any residue with a dry clean cloth. Carefully read the instructions and add the primer before use.
Important notes:
1. Allow 5 minutes drying time of the primer.
2. Keep out of contact with skin and eyes.
3. Do NOT inhale or swallow.

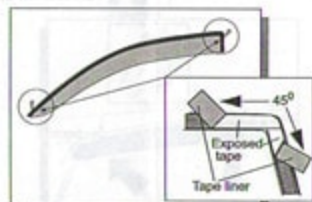

3. Peel back approx. 50mm (2") of tape liner from EACH of the tape sections and fold at 45° to outside of Slimline Weathershield. **DO NOT TOUCH EXPOSED SURFACE OF TAPE.**



4. Position the Slimline Weathershield on the door frame. Double check positioning of Slimline Weathershield as per step 1, then apply light pressure to exposed tape areas.



5. Peel remaining tape liner by pulling on exposed ends of liner, and apply firm pressure around attachment areas.



6. Using a clean, soft cloth rub down firmly around attachment areas 4 times to ensure maximum adhesion.

Care Instructions:



Clean Slimline Weathershield with a mild detergent and water solution.



Do not use abrasive cleaners.



Allow tape to cure for 4 hours before driving vehicle.

ACRYLIC SLIMLINE INSTALLATION INSTRUCTIONS

VEHICLE DESCRIPTION:


PART NUMBER:

FITMENT TIME:


30 MINUTES




WARNING: Do not install Slimline below 10°C (50°F). Ideal installation temperature is between 20°-40°C (70°-105°F). Slimline will adhere successfully below 10°C after initial curing. Full tape strength is achieved after 72 hours.

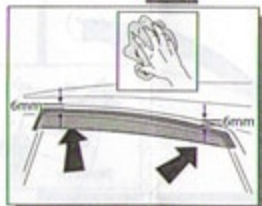


7. Clean and dry upper door frame. Trial fit Slimline Weathershield onto door frame by aligning the top edge of Slimline Weathershield 6mm from the top edge of the door frame, as shown. Note tape attachment areas. **DO NOT REMOVE TAPE LINER.**

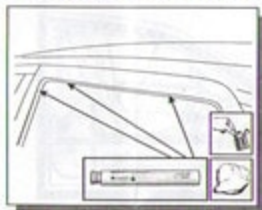


8. Clean previously noted tape attachment areas **THOROUGHLY** with the alcohol wipe provided. Wipe away any residue with a dry clean cloth. Carefully read the instructions and add the primer before use.
Important notes:
1. Allow 5 minutes drying time of the primer.
2. Keep out of contact with skin and eyes.
3. Do NOT inhale or swallow.

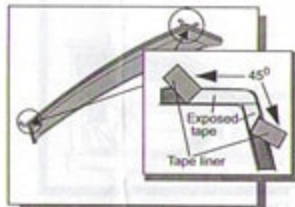


9. Peel back approx. 50mm (2") of tape liner from **EACH** of the tape sections and fold at 45° to outside of Slimline Weathershield. **DO NOT TOUCH EXPOSED SURFACE OF TAPE.**

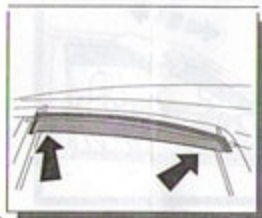

10. Position the front edge against the door frame (as shown above). Double check positioning of Slimline Weathershield as per step 7, then apply light pressure to exposed tape areas.

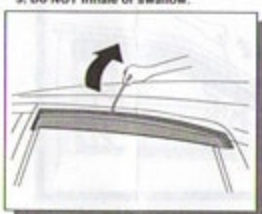

11. Peel remaining tape liner by pulling on exposed ends of liner, and apply firm pressure around attachment areas.

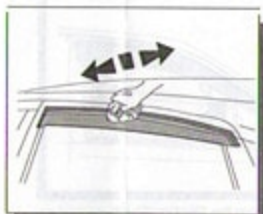

12. Using a clean, soft cloth rub down firmly around attachment areas 4 times to ensure maximum adhesion.

Care Instructions:



Clean Slimline Weathershield with a mild detergent and water solution.



Do not use abrasive cleaners.



Allow tape to cure for 4 hours before driving vehicle.